

RMVE-1D 120V
RMVE-2D 230V
RMVE-9D 100V



COMPLETE REWORK STATION
 WITH PNEUMATIC PUMP

SPARE PARTS	
DDE-1B / DDE-2B / DDE-9B:	
-REAR CIRCUIT	0018129
-ENCLOSURE	
· TOP	0019028
· BOTTOM	0014567
· FRONT+DISPLAY	0016312
· BACK	0013413
MVE-A:	
-CIRCUIT	0014059
-ENCLOSURE	
· TOP	0014860
· BOTTOM	0014861
· FRONT	0014688
· BACK	0014862
-SOLENOID VALVE	0006813

SPARE PARTS	
JTSE-1A / JTSE-2A	
-ENCLOSURES:	
· TOP	0019028
· BOTTOM	0013486
· FRONT+DISPLAY	0016862
· BACK	0016812
JTSE-1A	
-CIRCUIT	0017185
-SUCTION PUMP	0008723
-HOT AIR PUMP	0015970
JTSE-2A	
-CIRCUIT	0017671
-SUCTION PUMP	0008722
-HOT AIR PUMP	0015970





















DDE-1B 120V FUSE T-4A
DDE-2B 230V FUSE T-2A
DDE-9B 100V FUSE T-5A

JTSE-1A 120V FUSE T-8A
JTSE-2A 230V FUSE T-4A

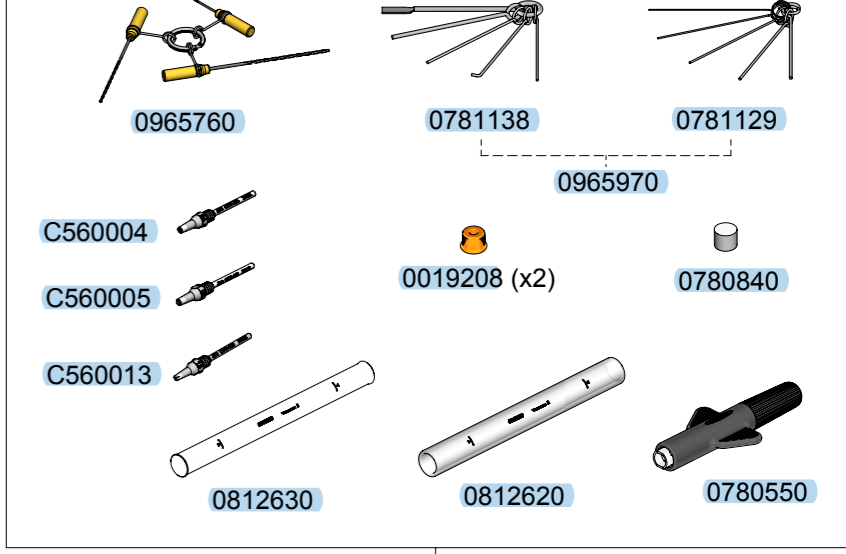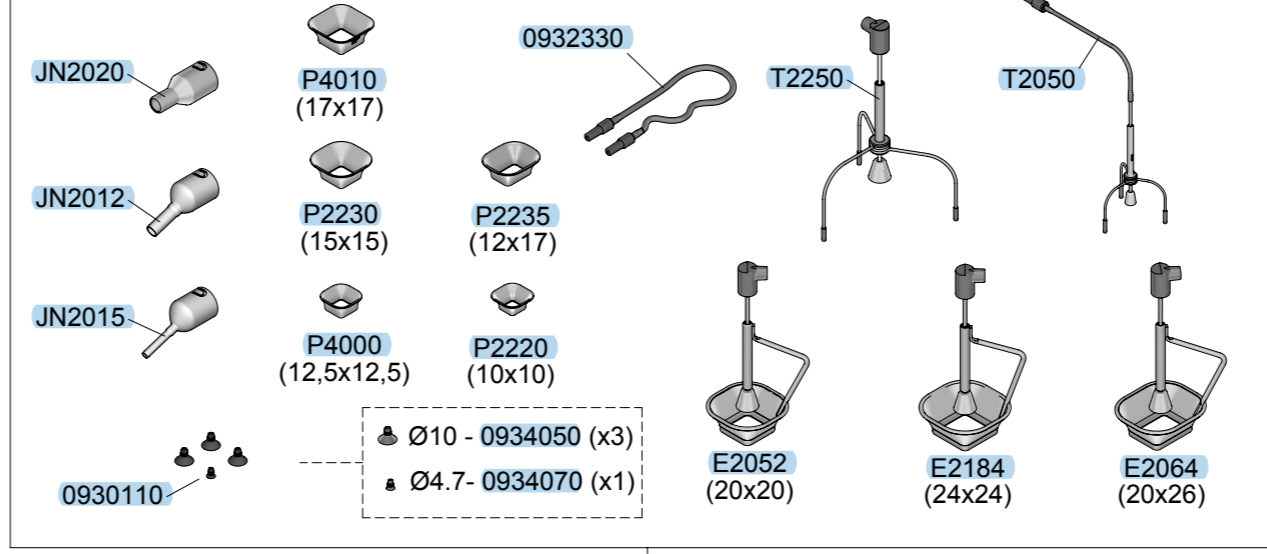

DDE-1B / DDE-2B / DDE-9B

 JTSE-1D / JTSE-2D

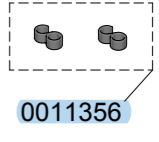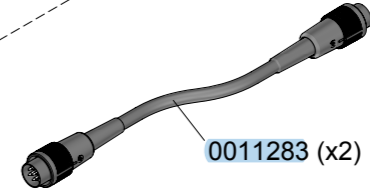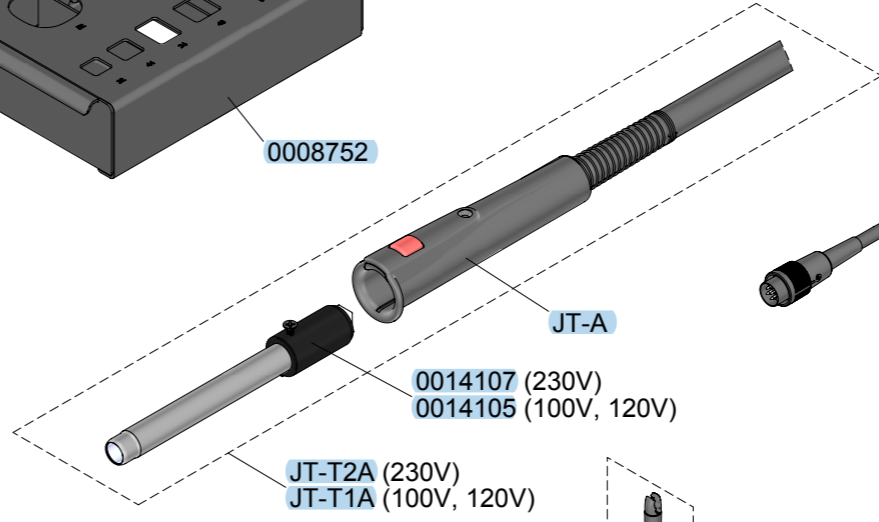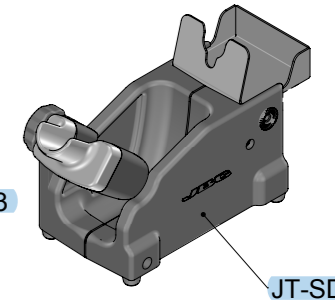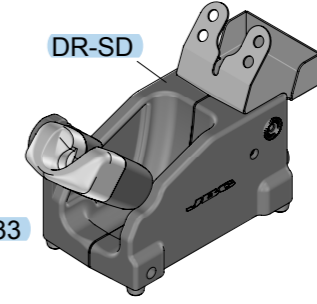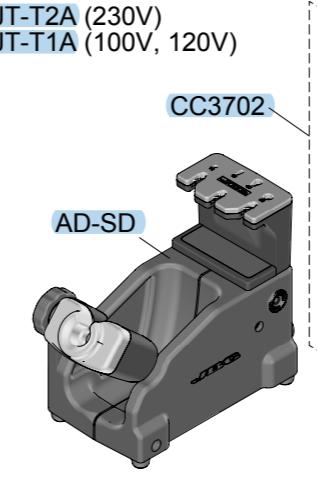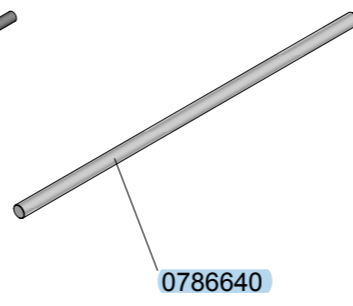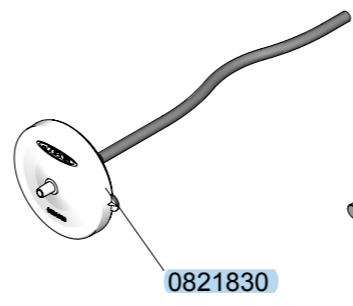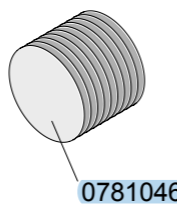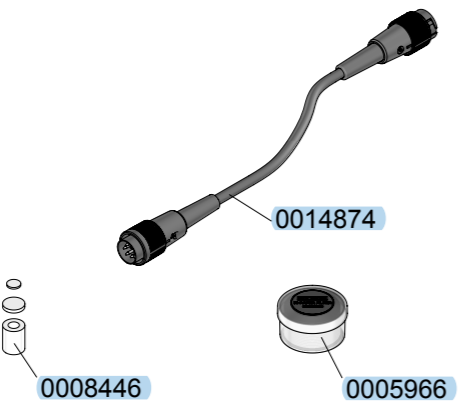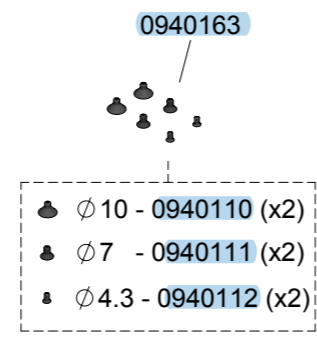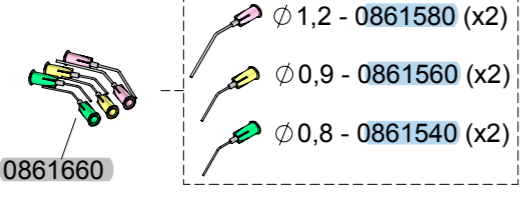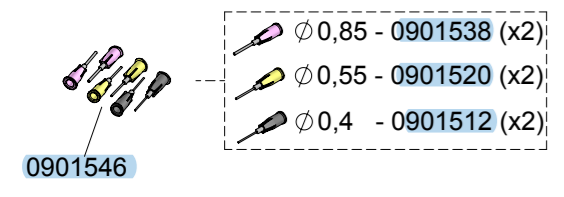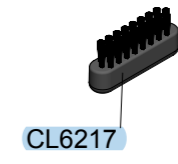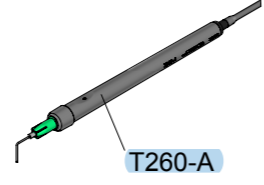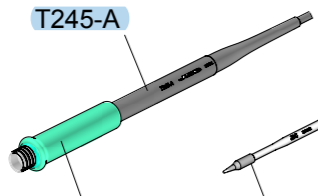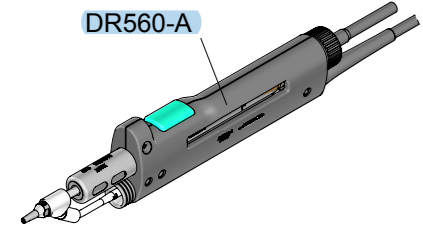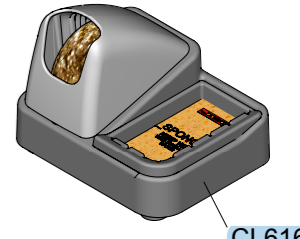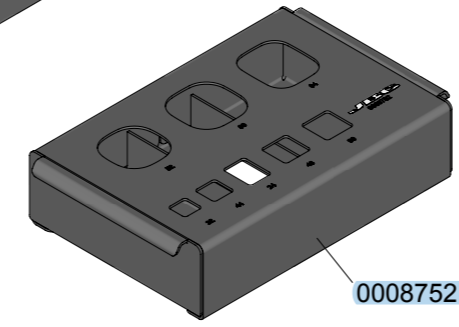

0014107 (230V)
 0014105 (100V, 120V)

JT-T2A (230V)
 JT-T1A (100V, 120V)

CC3702

CC3702

0010546

0010433

0010433

0012332

0010211

0008752

CL6217

CL6166

DR560-A

T245-A

0016057

C245903

C245906

T260-A

0940163

0901546

0861660

0014874

0005966

0781046

0821830

0786640

AD-SD

DR-SD

JT-SD