



# Fume extractor for AL-A Ref. F4468

## **Packing List**

The following items should be included:

Silicone tube (2 m length) .....1 unit Ref. 0006021



Cleaning accessory ..... 1 unit Ref. 0004009



Metal tube	1	unit
Ref. 0004886		

Metal suction tube ...... 1 u Ref. 0004867

Bridle ...... 6 units Ref. 0004918







Blocker ...... 1 unit Ref. 0005925

Screw ..... 1 unit Ref. 0411470

Manual ..... 1 unit Ref. 0005928











### Installation

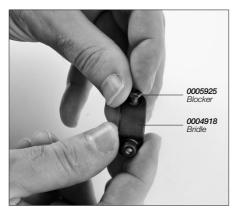


1 Insert the blocker into the bridle.

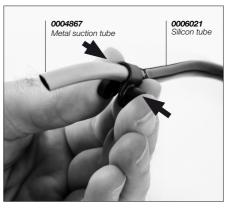

2 Put the bridle arround the metal suction tube.



**3** Place the bridle in the AL250-A handle and screw.

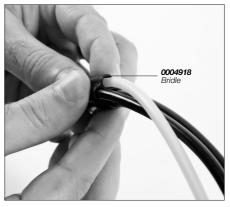

4 Strap the silicone tube to the handle cable and freeding tube, using the bridles, to make it more manageable.

Please make sure that the soldering iron is not connected to the station. This step has to be performed when the cartridge is cold.

### Specifications

- Diameter:	Ø 6mm	
- Lenght:	2 m (74.78 ft)	
- Weight:	81 gr (0.17 lb)	
Complies with CE standards ESD protected housing "skin effect"		



#### Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour. Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage. In accordance with the European directive 2002/96/EC, electronic equipment at the end of their life must be collected and returned to an authorized recycling facility.



Manual in other languages available on our website **www.jbctools.com**